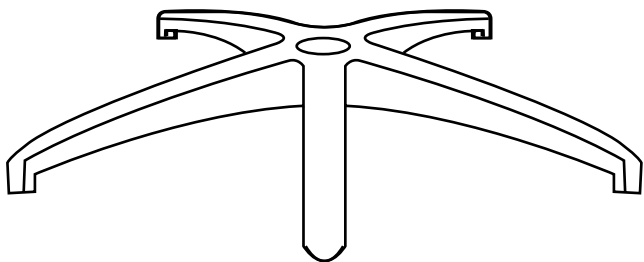
 
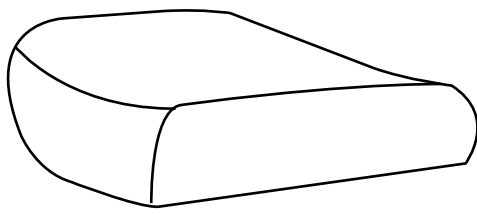
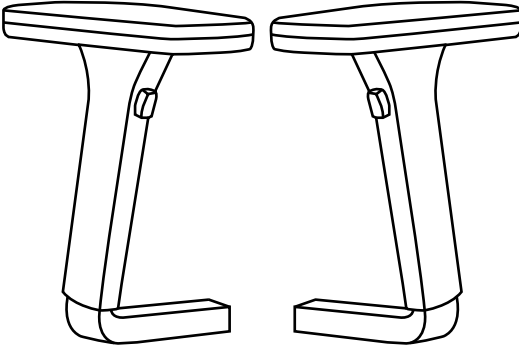
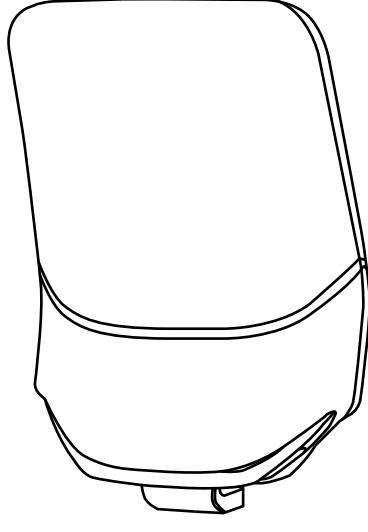
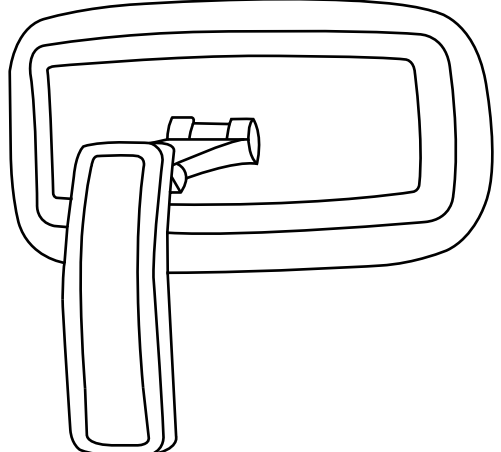
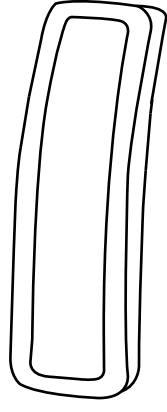
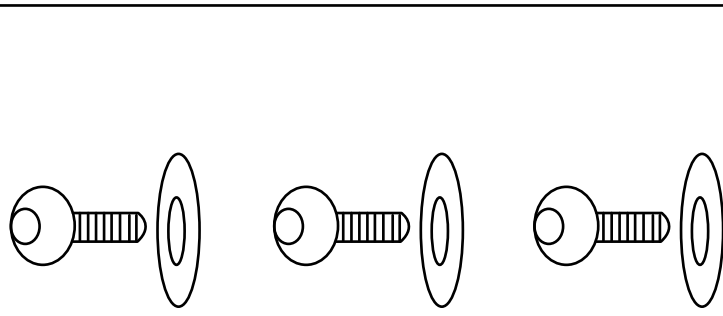
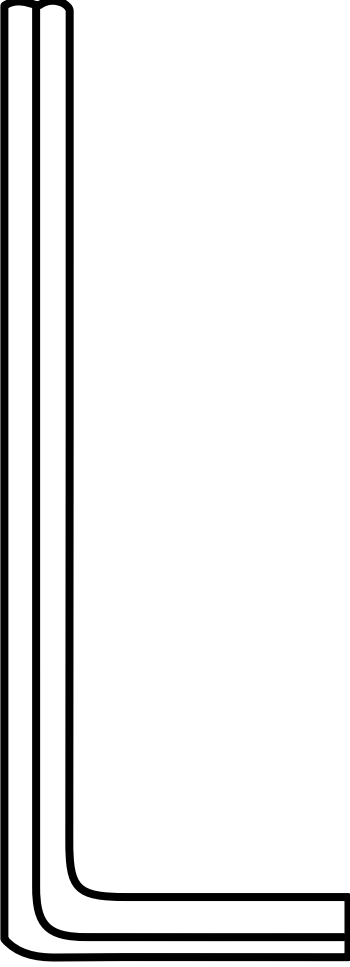
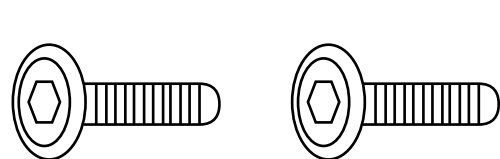


ASSEMBLY INSTRUCTION

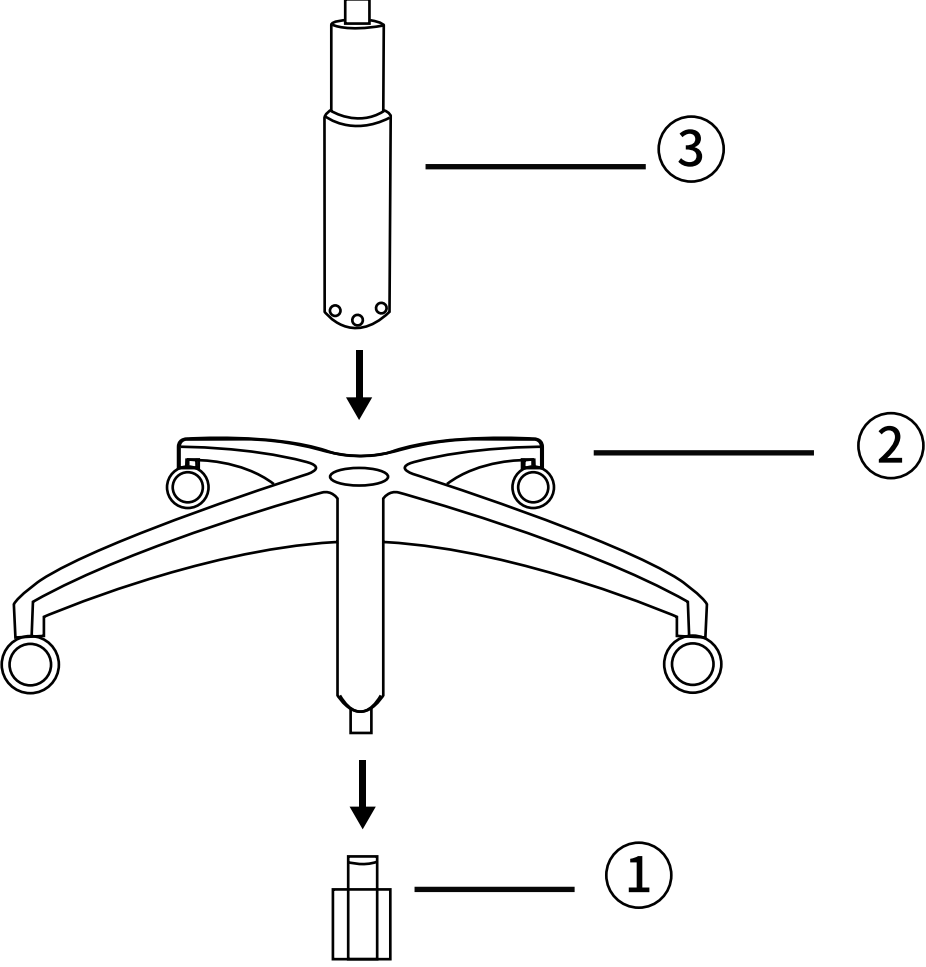
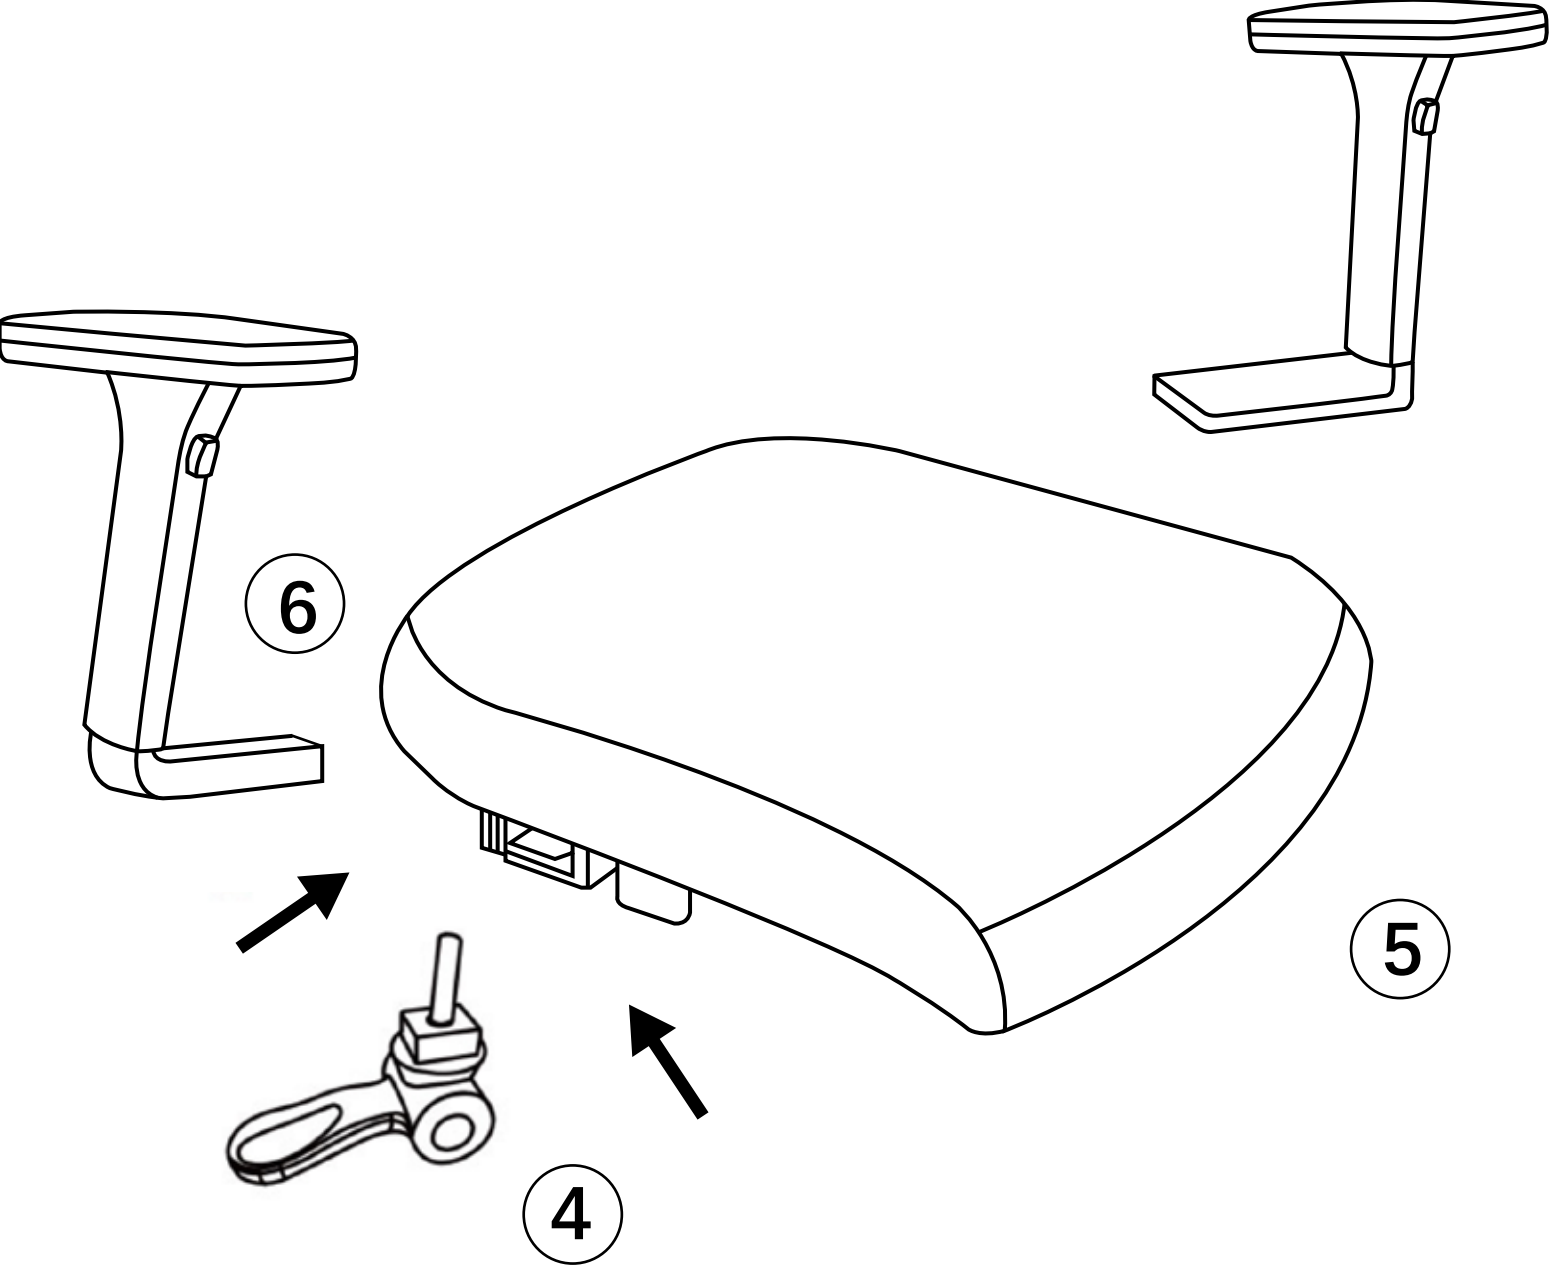
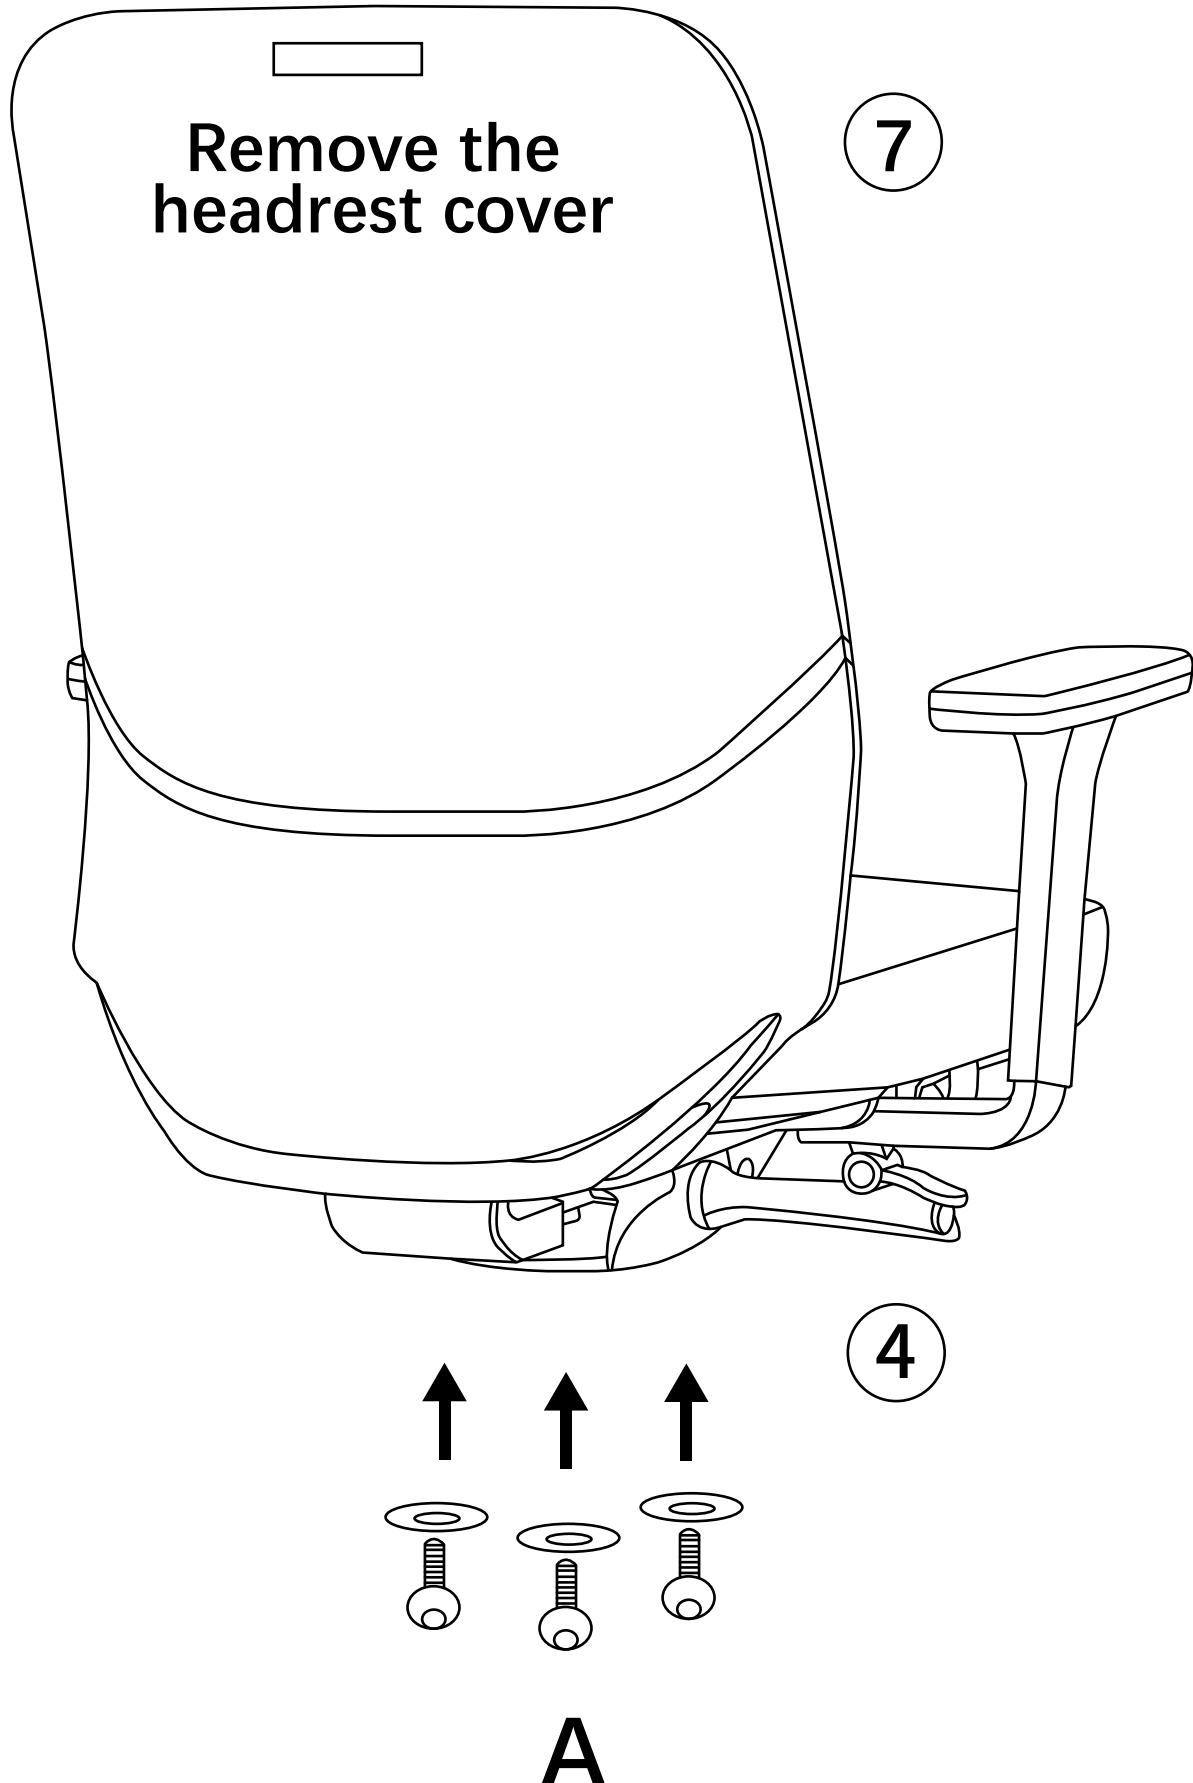
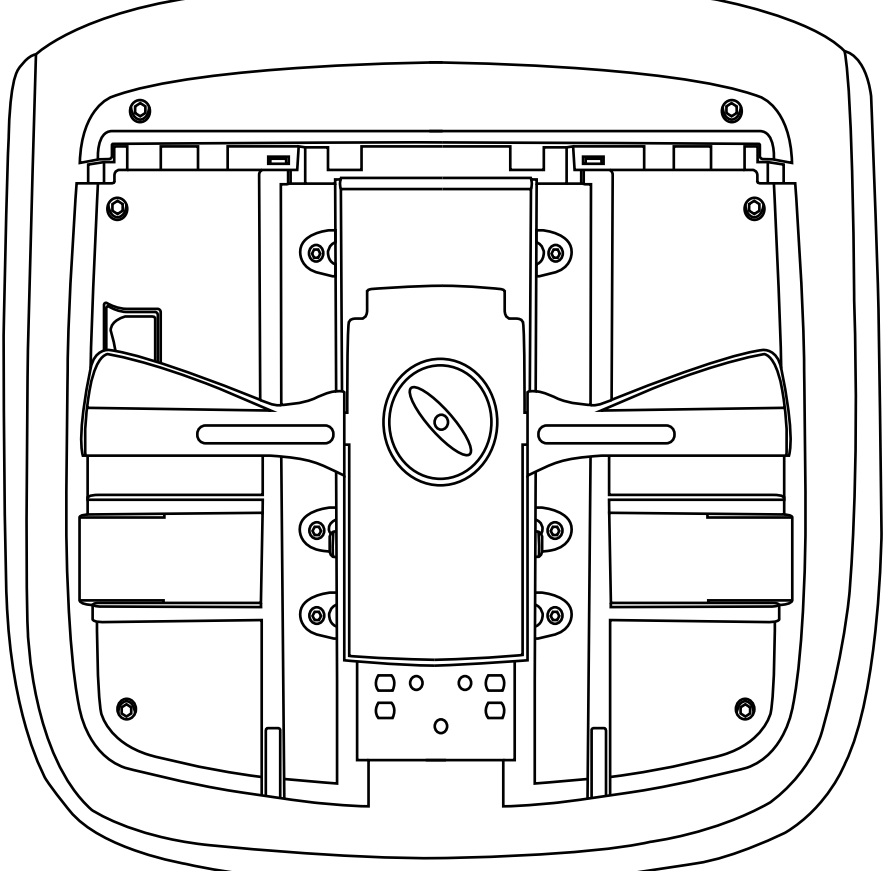
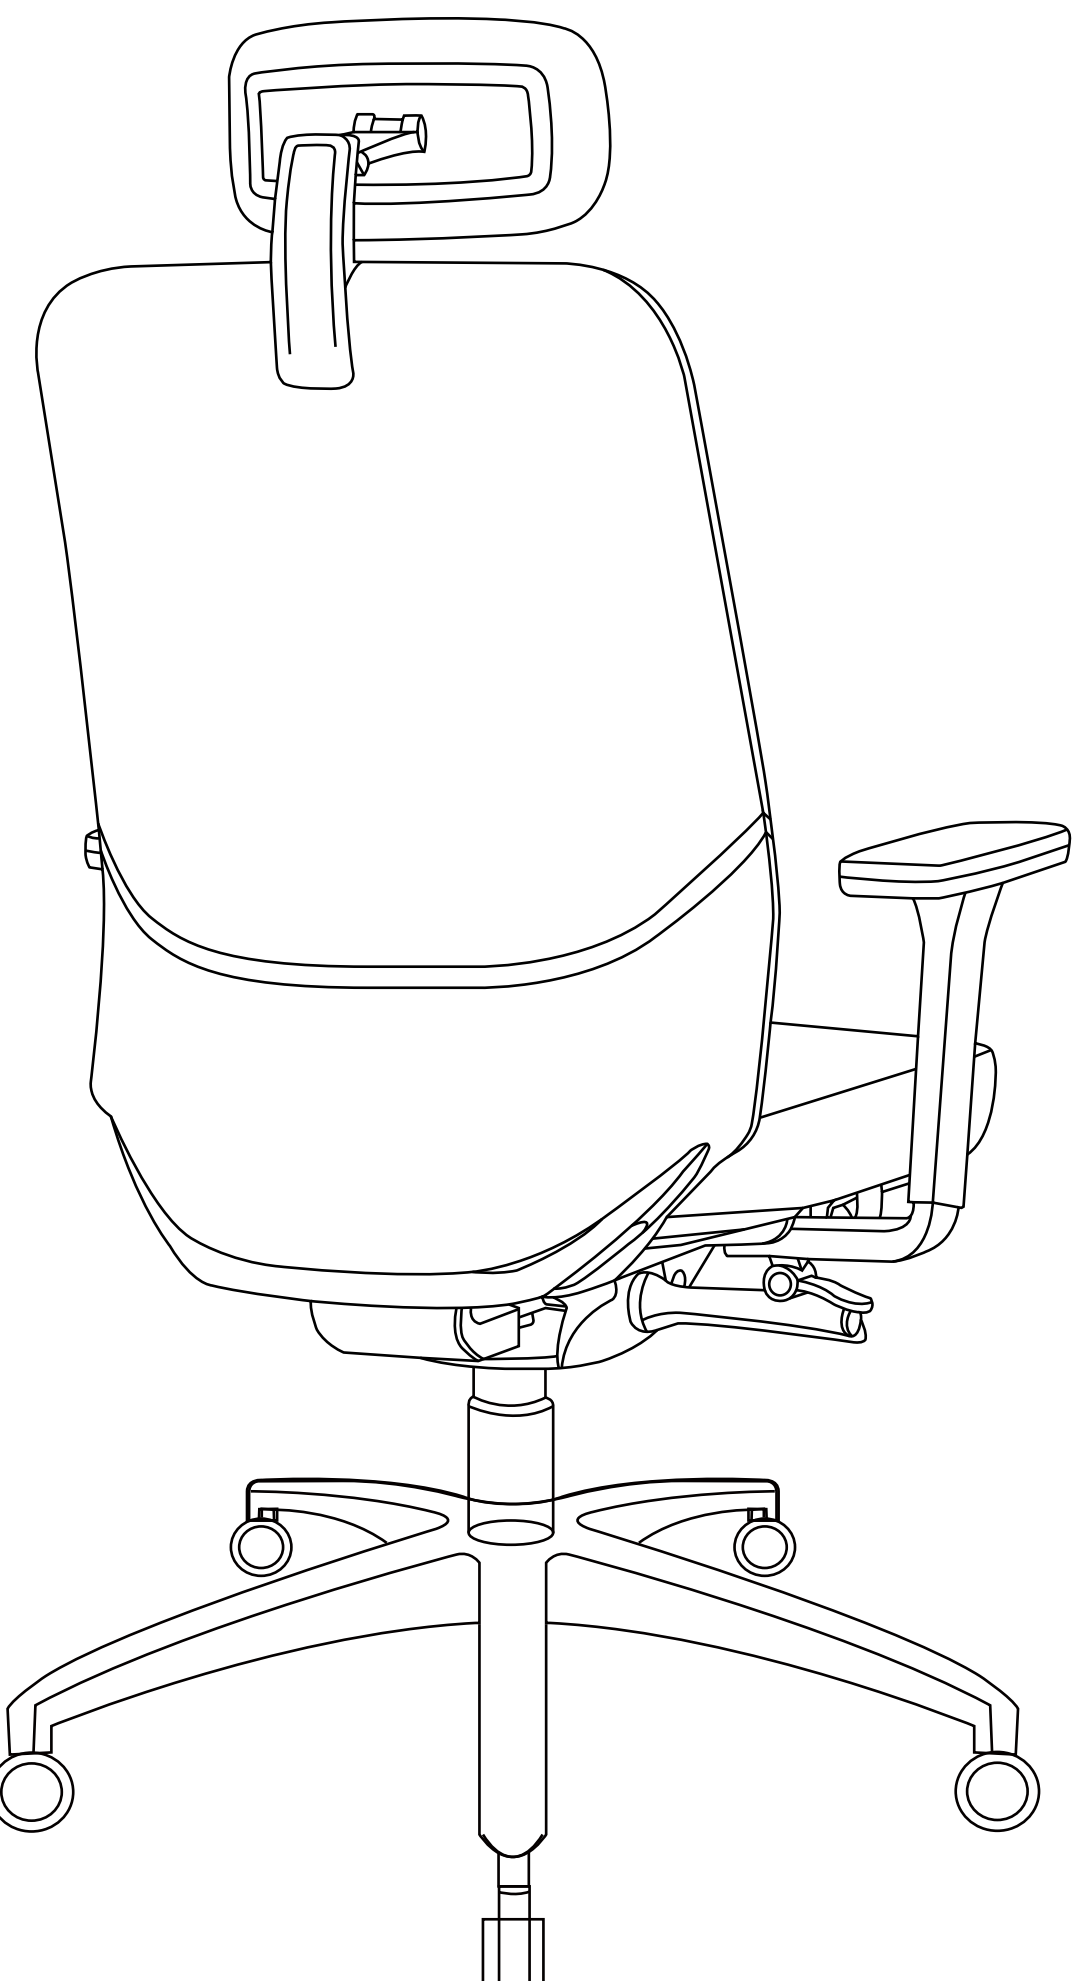
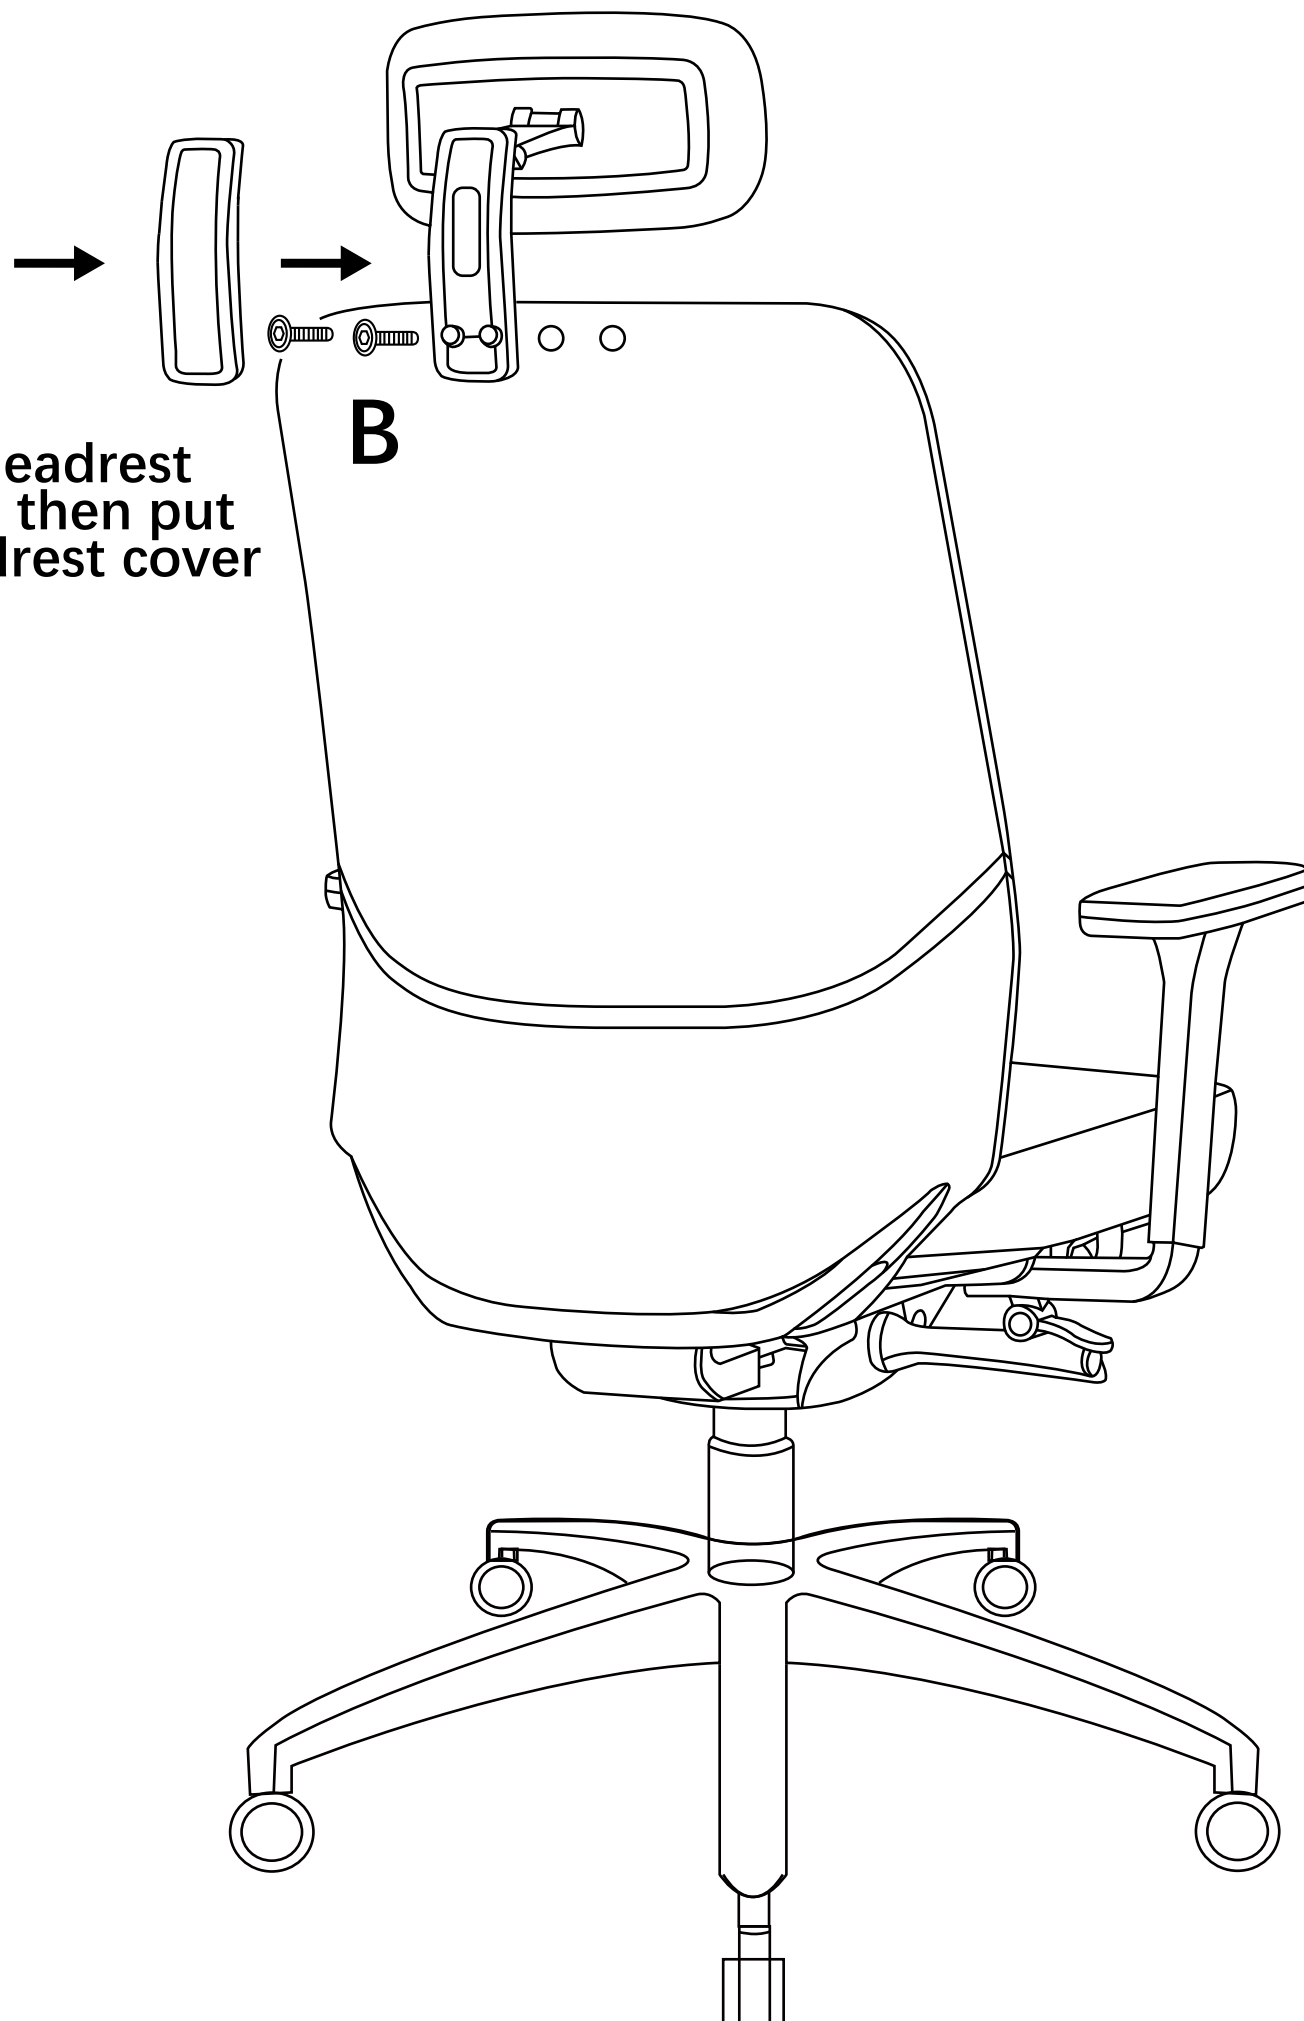
PARTS LIST

 CASTERS 5PCS	 BASE 1PC	 GASLIFT 1PC	 ARMREST SCREWS 2PCS	 SEAT 1PC
 ARMREST 1PAIR	 BACK 1PC	 HEADREST 1PC	 COVER 1PC	

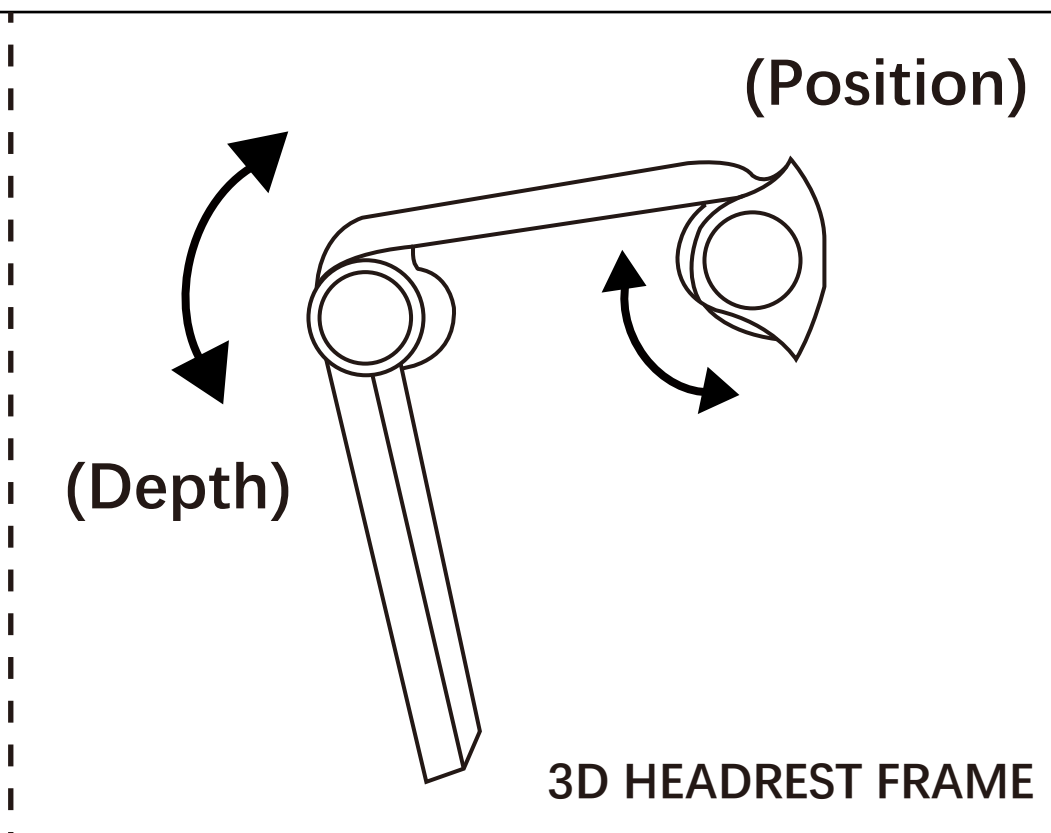
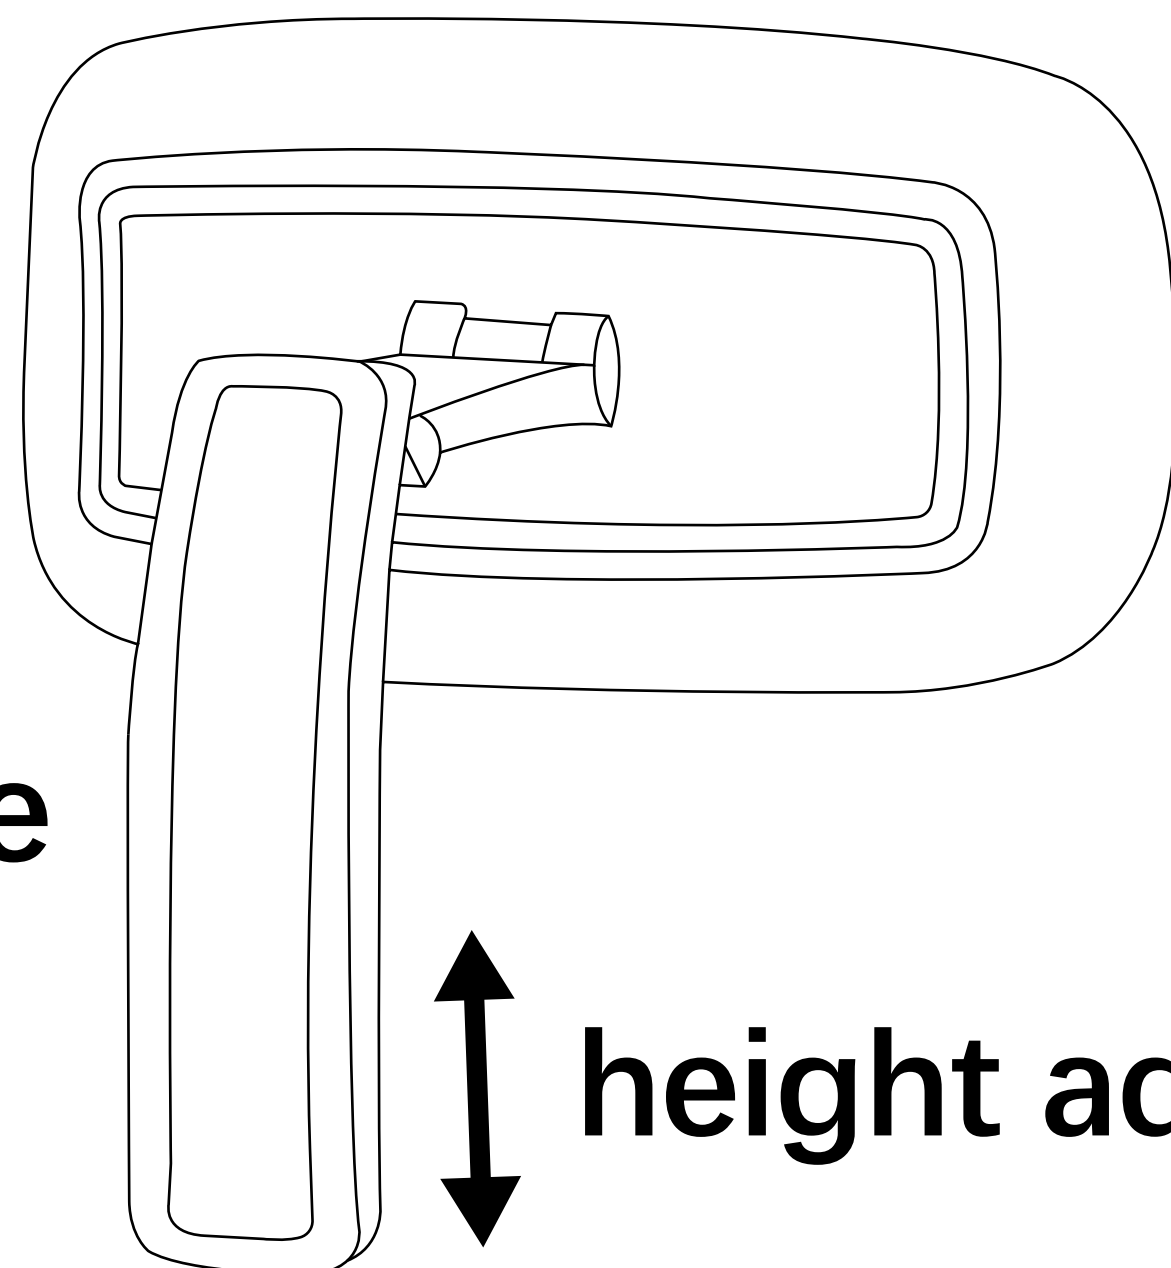
 
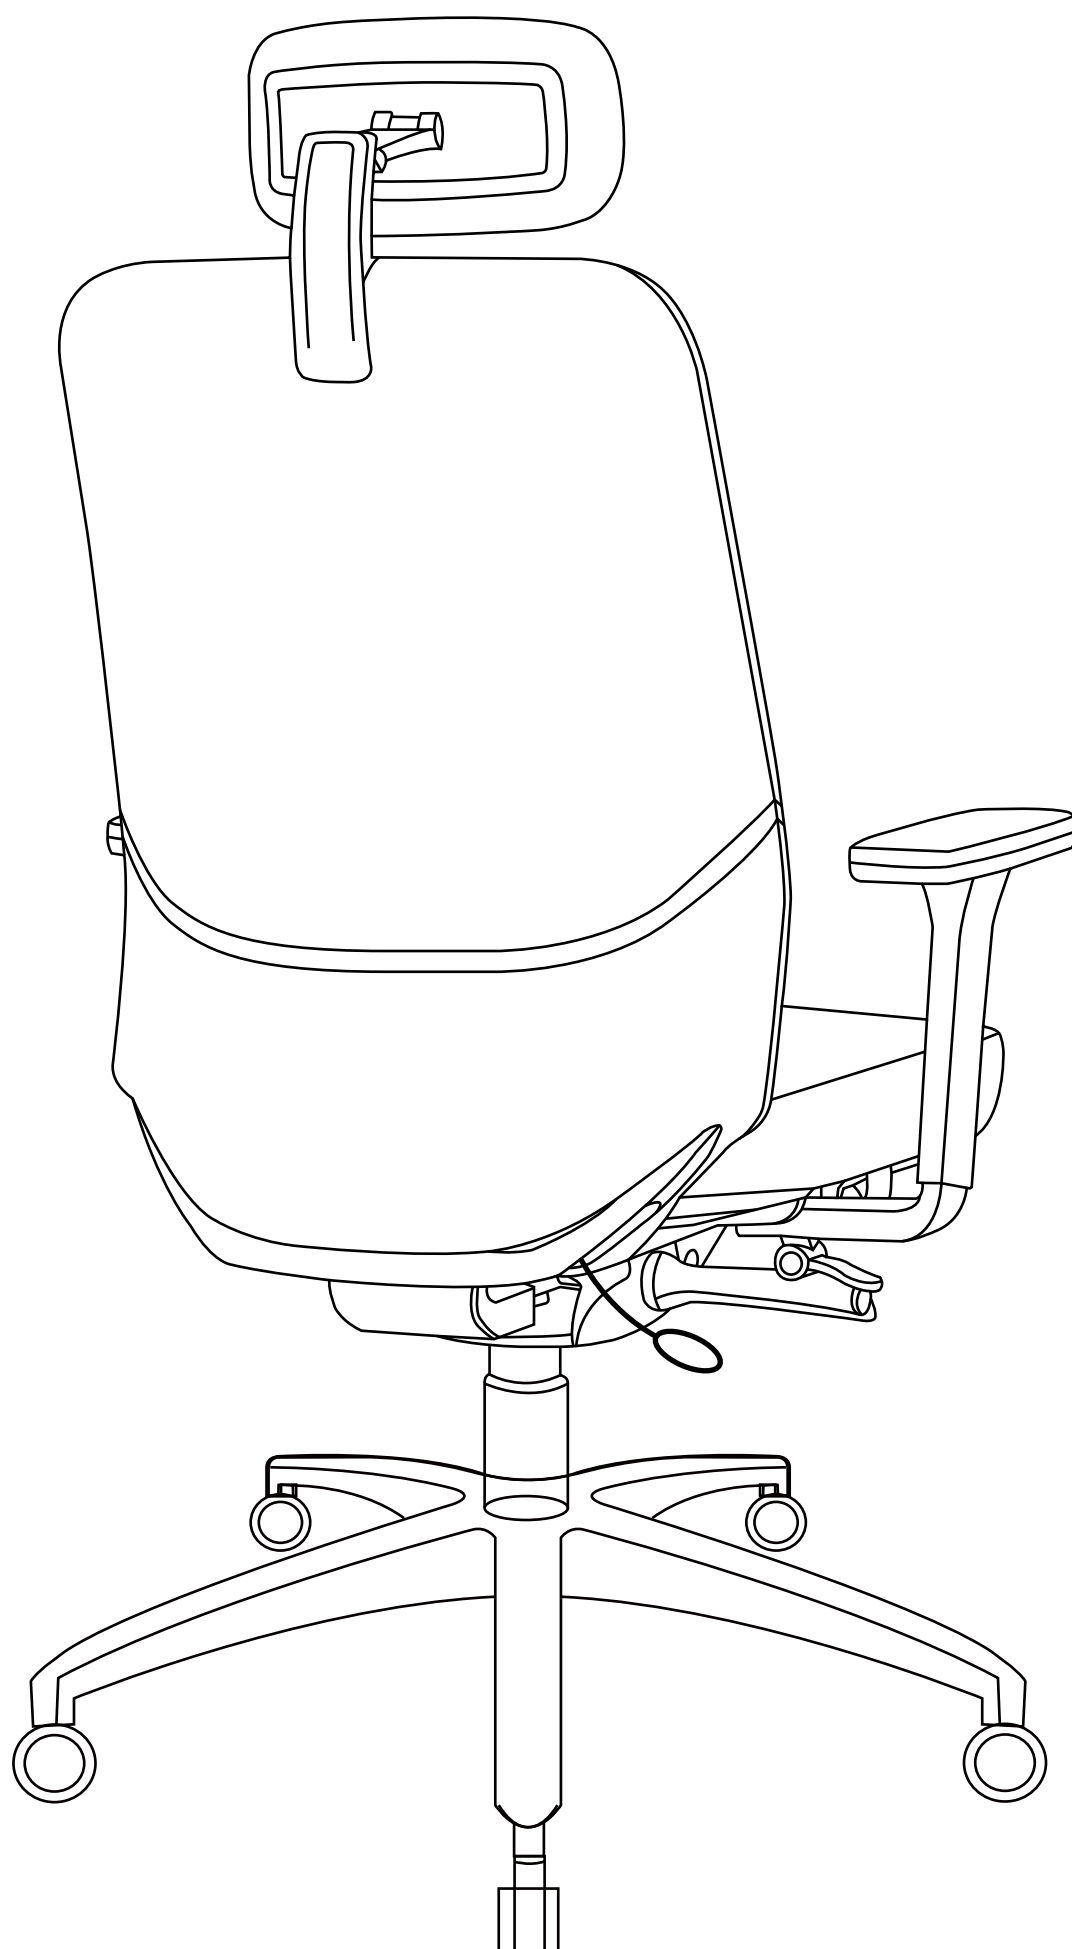
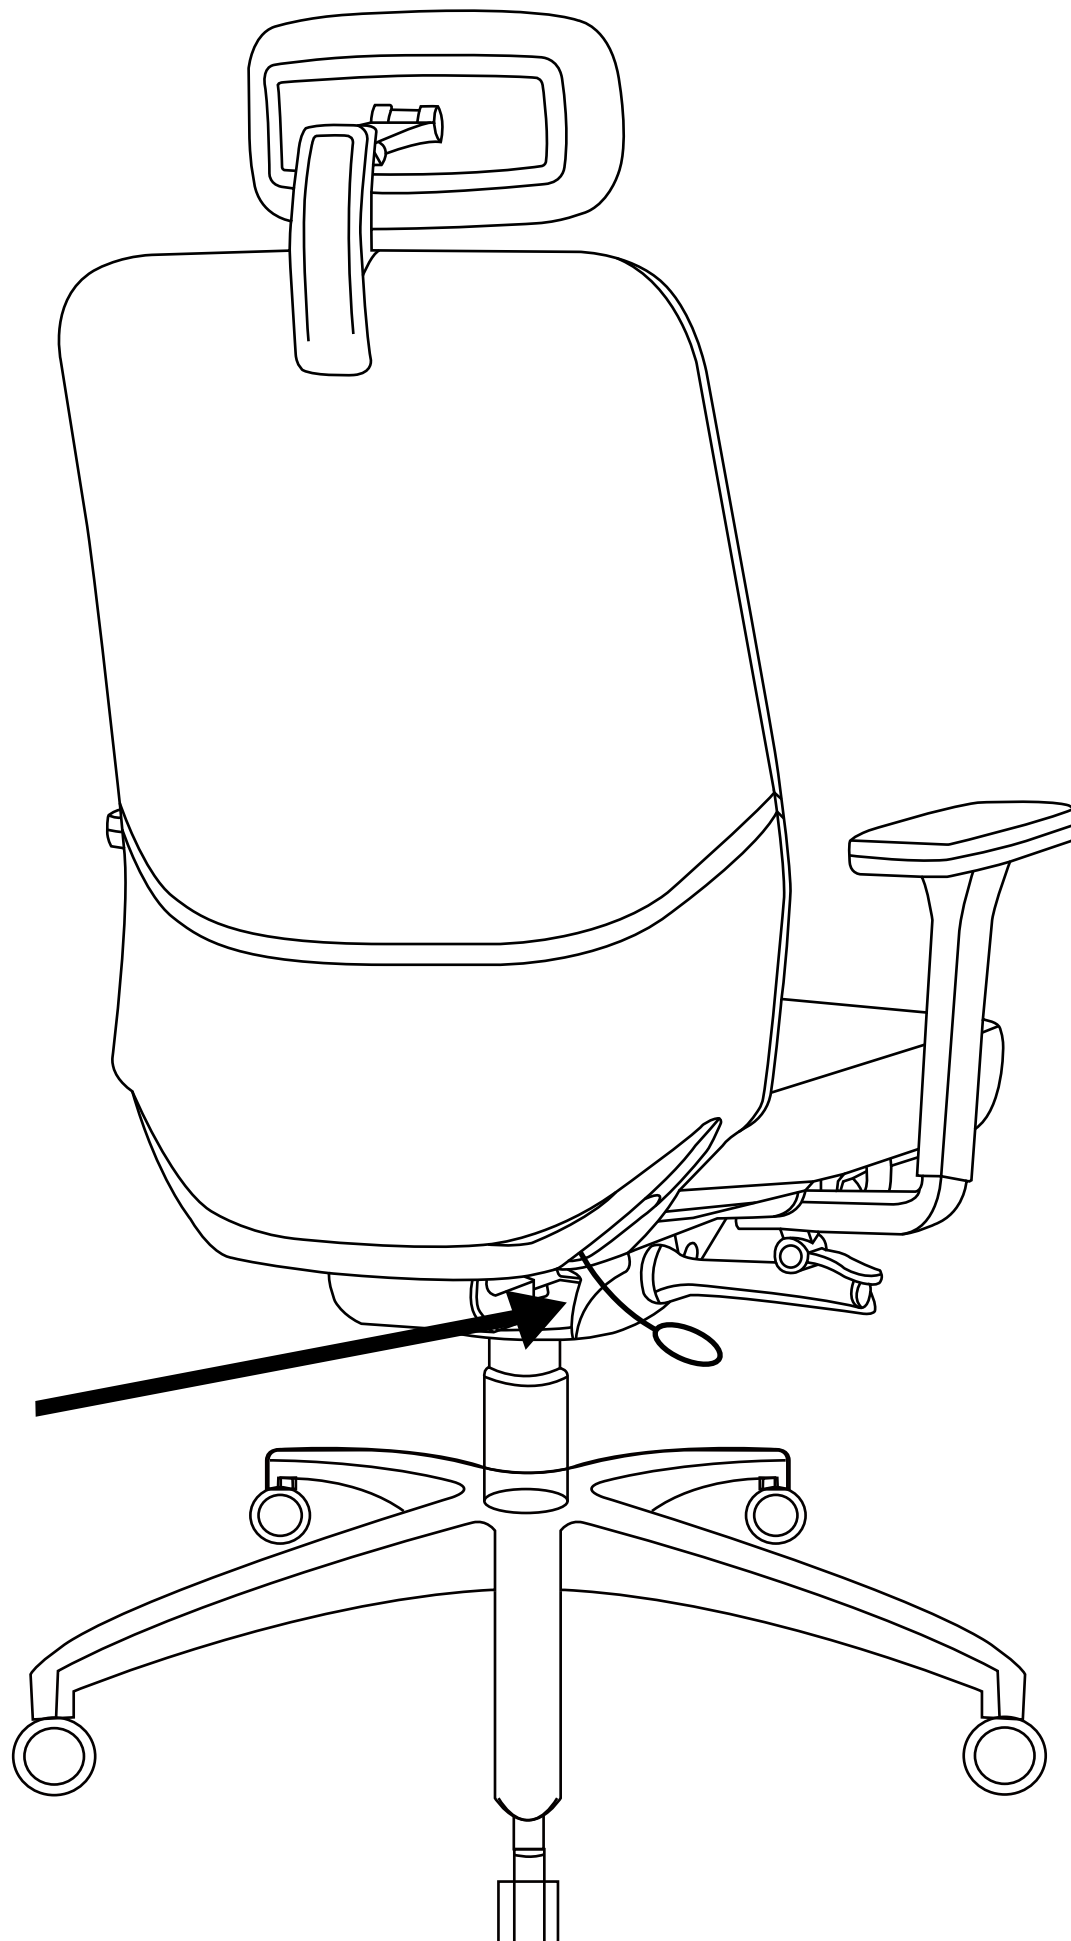
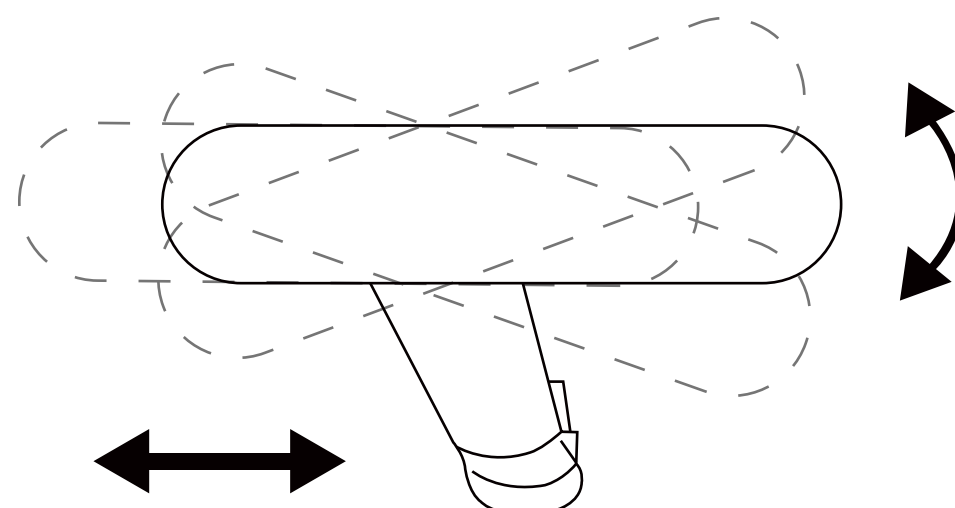
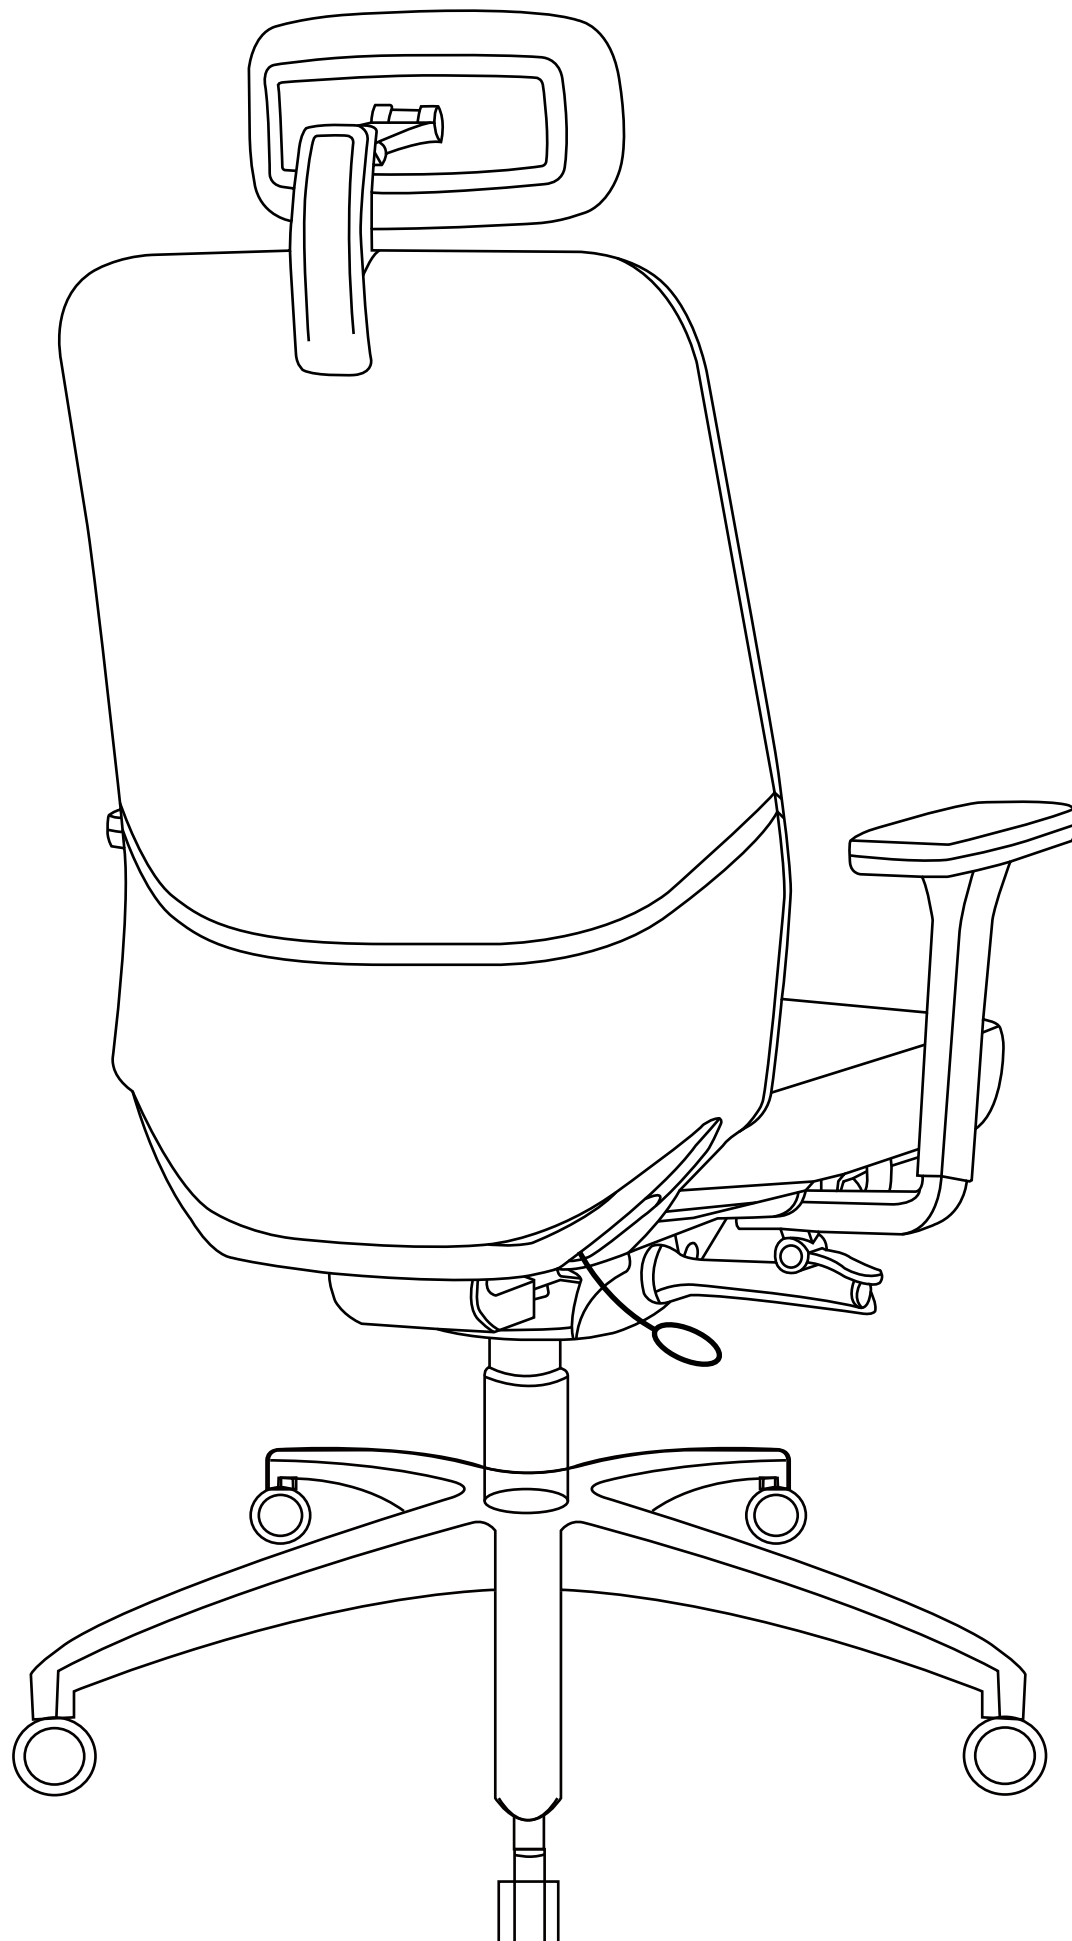
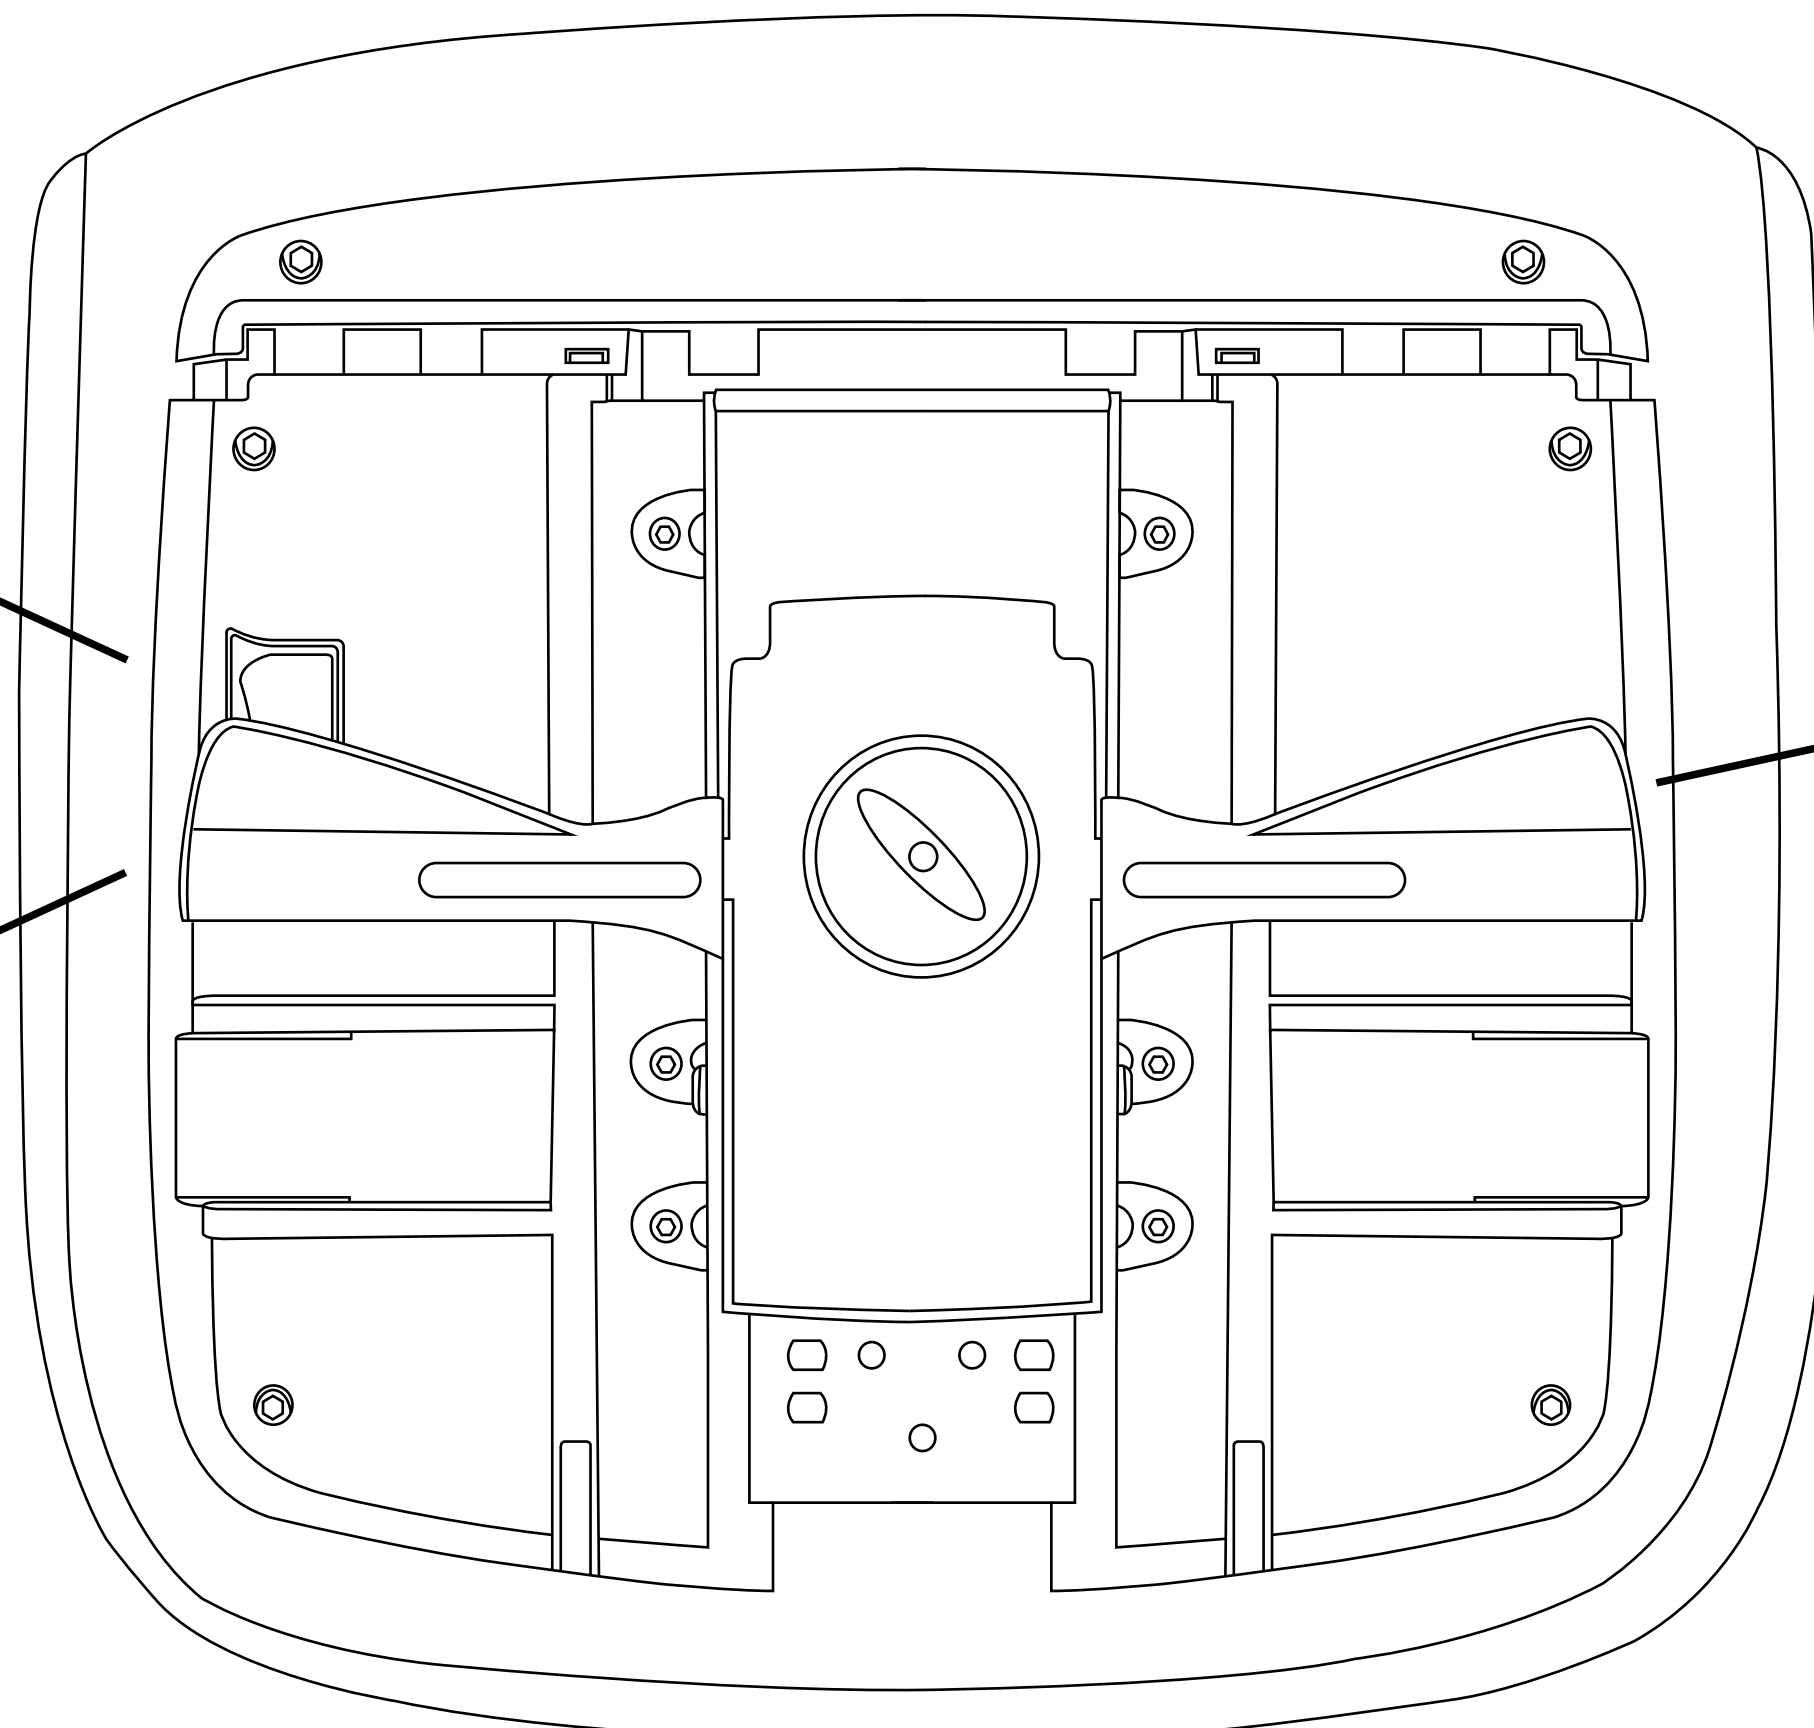
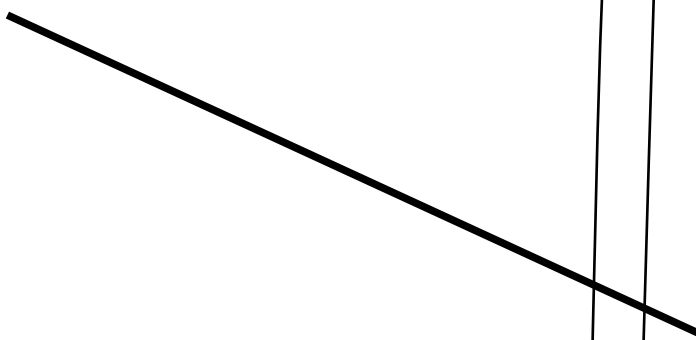
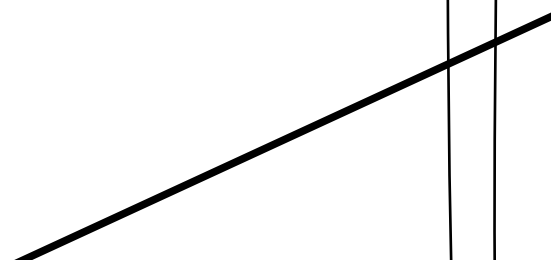
HARDWARE

Bracket screws A  M8*16 3SETS	ALLEN WRENCH  M5
Headrest screws B  M6*20 2PCS	

INSTALLATION STEPS

STEP 1: 	STEP 3: 	STEP 4: 
STEP 2: 	STEP 6: 	PREVENTIVE MAINTENANCE AND WARNING USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME. DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER. DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT. DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES. DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS ARE TIGHT, AT LEAST EVERY SIX MONTHS CHECK ALL BOLTS, SCREWS TO BE SURE THEY ARE TIGHT. IF ANY PARTS ARE MISSING, BROKEN. DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS. FAILURE TO FOLLOW THESE WARNINGS COULD RESULTIN SERIOUS INJURY.
STEP 5:  Install the headrest screws first, then put on the headrest cover		

PRODUCT INSTRUCTION

 (Position) (Depth) 3D HEADREST FRAME  Rotatable height adjustment	Back tilting adjustment  seat height adjustment  
back height adjustment  Remark: Air lumbar, suggest that users pump up with 18 times when using 	Armrest instruction 1.armrest height & width adjustment 2. 4D armrest  Backward & forward 
↑ FRONT  Seat height adjustable (Pull up to adjust)  Twist the paddle to adjust the seat forerake and lock  Twist the paddle to lock and unlock the back tilting 	